

Coffee Maker

Model NB2165CM



INSTRUCTION MANUAL

PLEASE SAVE THESE INSTRUCTIONS

TECHNICAL INFORMATION

Please make sure that your house installation voltage corresponds to the voltage marked on the unit.

Mains supply: 230-240V ~ 50 Hz – AC only

Rated Power: 550 Watts

BEFORE FIRST USE

Your appliance has been packaged carefully to ensure the product reaches you in good condition. If the product has been damaged, dropped, has a malfunction in any way, or if the supply cord is damaged, immediately contact your retailer for replacement or repair.

Carefully unpack your coffee maker. Make sure you do not discard any packaging material until all parts of the appliance have been found.

Carefully wipe the exterior of the appliance to remove any dust that may have accumulated. Dry with a dry towel. Do not use harsh abrasive cleaners. Wash the carafe in warm soapy water to remove any dirt that may have accumulated in transit. Remove any label or sticker.

WARNING! Do not immerse in water or any other liquids.

SAFETY AND INSTALLATION

Warning! Always install this appliance on a heat resistant level surface away from any liquid carrying vessel or other heat source.

Warning! Do not let the supply cord hang over the edge of any table as there may be a risk of scalding or electric shock should young children pull the appliance from the bench.

OPERATION GUIDE

Connect to a suitable power supply, corresponding to that of the appliance, 230-240V AC ~ 50 Hz.

First time use.

For first time use it is recommended the appliance be operated without coffee beans in the manner described below and then this water be discarded. This will remove any traces of impurities that may have found their way into the appliance.

Fill carafe with desired amount of cold water, up to 650ml or 5 coffee size cups may be made at any one time. The recommended method of filling water reservoir is to fill the coffee carafe first and then pour this amount of water into the water reservoir. Not less than 2 cups is recommended. Note: The brewed amount will always be slightly less than the initial amount. Place this amount of water into the water tank reservoir. Lift top cover by lifting from the front side flaps. **Warning!** Do not overfill water reservoir as hot water may overflow the carafe during cycle.

Using one hand to secure the coffee maker base carefully open the filter holder compartment by moving sideways to the right. Place removable coffee filter into filter holder compartment. Place desired coffee grinds into removable coffee filter. Use one level tablespoon of regular grind per cup as a guide. Place filter into filter holder. Close filter holder compartment, making sure that anti drip valve is correctly located above center of coffee carafe lid.

Place the empty coffee carafe onto the warming plate ensuring the anti-drip valve is correctly seated over the carafe centre.

Turn "ON / OFF" switch to ON position (I). Light will illuminate to indicate power on.

The coffee maker will automatically boil water and cycle through the filter, filling carafe with brewed coffee.

When coffee cycle is complete the warmer plate will cycle on and off to keep coffee warm for a period. Cover with lid. Do not allow the carafe to sit indefinitely on warmer plate as it is only intended as a warmer plate.

IMPORTANT SAFETY INSTRUCTIONS

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury. Always check that the power supply corresponds to the voltage on the rating plate.

Supply

This appliance must be connected to a suitable 230-240V ~ 50Hz power supply. If using an extension cord, ensure that the extension cord is of a suitable 10amp power rating and of a suitable size. Fully uncoil any cord used as a coiled cord may overheat.

Supply cord and plug

Do not abuse or damage the power cord. Fully uncoil before use. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Children

Caution. Keep out of reach of children. This appliance is not intended for use by young children or infirm persons. Young children must be supervised by a responsible person to ensure that they can operate the appliance safely. Young children should be supervised to ensure that they do not play with the appliance

WARNING: Only allow children to use the appliance without supervision when adequate instructions have been given so that the child is able to use the appliance in a safe way and understands the hazards of improper use.

Use and environment

Do not use outdoors. Do not leave in direct sunlight as this may damage the plastic. This appliance is for household use only, not commercial or industrial use. The power socket must be readily accessible so that it can be unplugged in an emergency.

Hot Surfaces and Fire risk

If smoke is observed, switch off the appliance immediately.
Do not touch hot surfaces, allow appliance to cool completely before cleaning.

Damaged or dropped

Always inspect your appliance before use. Do not use this appliance if it has been damaged, dropped, left outdoors or dropped in water. Return it to an authorised service dealer for examination and repair.

Water

Do not immerse in appliance in water or other liquids or use near washbasins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use it with wet hands.

Danger to children

Safely dispose of plastic bags and other components of the packaging. They may be potentially dangerous to children.

MAINTENANCE AND CLEANING

Regular maintenance of your appliance will keep it safe and in proper operational order.

Warning! When not in use or before cleaning, always disconnect the appliance from the mains supply.

Cleaning

Regularly clean the outside of the appliance with a soft damp cloth and dry it with a dry towel. Do not immerse in water. Do not use harsh solvents to clean the plastic. Wash the carafe in hot soapy water and dry with a dry towel. Remove the coffee filter holder by lifting upwards, wash in clean hot water and dry with a dry towel. Rinse the coffee filter in hot water regularly.

Regularly operate the appliance without coffee beans to allow the appliance to flush out impurities left in the heating chamber and internal piping.

Guarantee Card

This product is guaranteed against faulty materials and workmanship for a period of twelve months from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from whom this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

Type of Appliance: _____

Model No.: _____ Purchase Date: _____

Product Purchased from _____

Name: _____

Address: _____

_____ Phone Number: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged.